


# Craneservice Brno, s.r.o.

SERVIS ZVEDACÍCH ZAŘÍZENÍ

tel. + fax.: 543 251 331 - 2  
mobil: 608 817 423

## LIEBHERR 63K

STAVEBNÍ VĚŽOVÝ JEŘÁB  
TOWER BUILDING CRANE

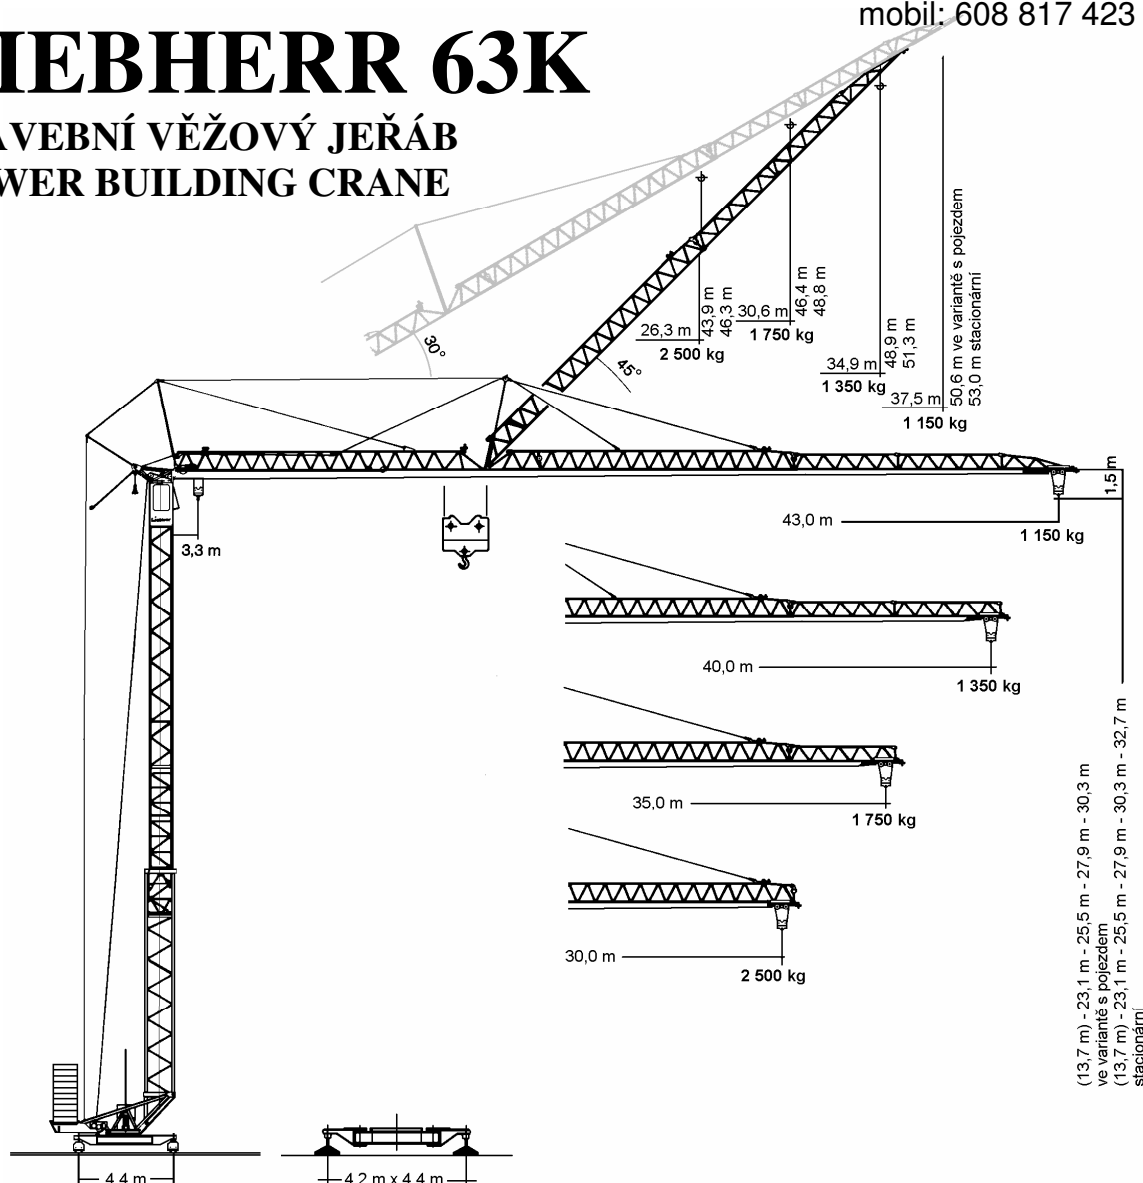

Vyložení (m)	Nosnost (m/kg)	Nosnost (m/kg)																				
		19	20	22	24	26	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43
43	3,3-19,5 3050	3050	2970	2640	2380	3160	1970	1890	1800	1740	1670	1610	1550	1490	1440	1390	1350	1300	1260	1220	1180	1150
40	3,3-20,6 3050	3050	3050	2810	2530	2300	2100	2010	1900	1850	1780	1720	1650	1590	1540	1490	1440	1390	1350			
35	3,3-21,7 3050	3050	3050	3050	2760	2510	2290	220	2110	2030	1950	1880	1810	1750								
30	3,3-21,7 3050	3050	3050	3050	3050	2960	2710	2600	2500													
Vyložení (m)	Nosnost (m/kg)	Nosnost (m/kg)																				
		11	12	14	16	18	20	22	24	26	28	30	32	34	35	37	38	39	40	41	42	43
43	3,3-19,5 3000 -11,6 6000	6000	5730	4700	3960	3410	3000	2650	2370	2140	1950	1750	1640	1510	1460	1350	1300	1260	1220	1170	1140	1100
40	3,3-20,6 3000 -11,6 6000	6000	6000	4970	4190	3620	3170	2810	2520	2280	2070	1900	1750	1610	1550	1440	1390	1340	1300			
35	3,3-21,7 3000 -11,6 6000	6000	6000	5370	4540	3920	3440	3050	2740	2480	2260	2070	1910	1760	1700							
30	3,3-23,3 3000 -11,6 6000	6000	6000	5800	4900	4240	3720	3310	2950	2690	2350	2250										

(13,7 m) - 23,1 m - 25,5 m - 27,9 m - 30,3 m  
ve variantě s pojezdem  
(13,7 m) - 23,1 m - 25,5 m - 27,9 m - 30,3 m - 32,7 m  
stacionární